

SKINNY F327S

3G MOBILE PHONE

QUICK START GUIDE

Search 'ZTE Australia' on Facebook ,
Google+ and Twitter to keep in touch.

 


ZTE © March 2016 Version 1.0

GETTING STARTED


1. REMOVE THE BACK COVER

- Use the thumb catch in the middle of the back panel to open the battery cover.

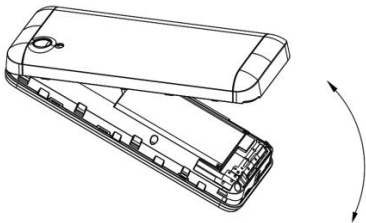

2. INSERT THE SIM CARD

 - Insert the SIM card with the gold contacts facing down and the slanted edge on the top left

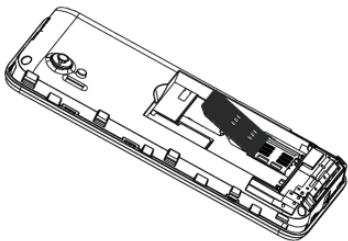

3. INSERT THE BATTERY

- Press the battery down flush into the case lining up the gold contacts and pins.
- Replace the battery cover and press gently to close the case.
- Press and hold the Red power key to power your device on and off.

4. CHARGE YOUR HANDSET

- Plug the micro USB cable in to the handset
- The plug and socket are shaped so they will only fit together one way.
- A sound is played when the charger or USB cable is inserted into the handset.
- Only use the AC charger and USB lead supplied.
- Insert the charger lead carefully.
- Check the plug and socket are

aligned correctly.

- Do NOT use excessive force which may damage the USB port.
- Be careful to avoid tripping on the lead whilst it is plugged in.
- Physical damage to the USB port is NOT covered by warranty.
- Normal charge time is 3-4 hours.
- Do not leave on charge for more than 24hrs.
- Charge the battery between 0°C~45°C. Charge the battery promptly when flat.
- With poor network conditions (less than 2 bars) battery life is reduced.
- When not using Wi-Fi, Bluetooth and Location features turn these off to get longer battery life.

GET TO KNOW YOUR MOBILE PHONE



UNLOCK THE SCREEN

- **To unlock**, press the power key to wake up the screen
- Press the Left Soft Key then the

* Key to **Unlock**

- To lock the screen press the * key then the left soft key
- Go to Menu > Settings > Phone Settings > Display > Screen auto lock to change the timer or switch this on or off.
- Whenever the screen is locked a message will appear in the centre of the screen telling you how to unlock the device.
- When the screen and keypad are locked it is still possible to dial the Emergency Services, so be careful not to activate the keypad or press the device against hard objects in your bag or pocket.

NAVIGATION KEYS

- Press the navigation keys to launch the default shortcuts:



- During a Call the left and right navigation keys will adjust the in call volume.

Power Key – hold down to power On your device



Press to End a Call.

Press to Exit a menu and return to the idle screen



Call Key - After entering a number press to make the call

Press to access the call logs



Press twice for last number redial.



OK Key to access the Main Menu and confirm menu selections







Unlock >

















Unlock – Press the Left Soft




 
Key then * to unlock


 
HANDSET ICONS

 Network signal level	 Alarm is set
 No Network	 Bluetooth On
 Connected to 3G	 Missed Call

 Connected to 2G	 Received SMS
 HSDPA Data	 Received MMS
 EDGE Data	 Outgoing Message
 Battery level	 Screen is locked
 Ring and Vibrate	 Roaming
 Ring only	 Speaker is muted
 Vibrate only	 Active Call
 Silent	 Call is on Hold

CALLS



- Enter the number on the keypad, if you know the number
- Select the left soft key to access Contacts, select the number then press OK or the Green key  to call
- Press the  button to access the call log to use your call history to call.

Whichever way you choose, press the green key  to make the call, press the red key  to hang-up.


Handy Hint:

Use the left and right keys to change volume during a call.

INCOMING CALLS

- Press the green key  answer the call
- Press the red key  or Reject to end the call.

CONTACTS

Function	Description	Menu
Add a Contact from a received call	Access the Call log and create a new Contact from an incoming call record	Press the Call Key  > Select the call record > Press Options > Save to Phonebook
Add a Contact from an	Go to your Inbox and select the	Options > Advanced > Use

SMS	required SMS.	number > Options > Save to Phonebook
Copy Contacts from a SIM card	Copy Contacts from the SIM into the handset.	Menu > Contacts > Options > Phonebook settings > Copy contacts

MESSAGING

Stay connected using your mobile to send messages, multimedia messages and emails to your family and friends.

Important Note:

If your text message exceeds 160 characters you will be charged for multiple text messages.

Letters, symbols and spaces count as characters.

HOW TO CREATE A TEXT MESSAGE (SMS)

- Press the Right Soft Key as the shortcut for Messages (SMS) or select Menu > SMS > Write Message (OK)
- Follow the tips below to add Contact(s), and to send your message.

Handy Hint:

Press OK, OK, OK from the idle screen as a shortcut to write a new SMS

MEDIA PLAYER

- Use the Right Navigation key or Menu > Media to open.
- Press the Left Soft Key for Options > Main Menu > Music, Movie etc.
- Press Options Add from Folder

to import any music on your device.

- See Connect to a computer to import music files from your PC

CONNECT TO A COMPUTER

Plug your device into a computer using the USB lead provided. The handset will show a list of options to connect.

To save a picture from your handset, plug in > Mass Storage Mode > On your PC open Windows Explorer and browse to the handset > Photos folder. Copy the photos to your PC.

This device supports the Windows and MAC OS. MAC uses Mass Storage mode as a file system browser and Windows also supports MTP mode.