

MF730M

USB Modem

Quick Start Guide

LEGAL INFORMATION

Copyright © 2016 ZTE CORPORATION.

All rights reserved.


No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : NZ_1.0

Get to Know Your Device


1. microSD card slot
2. SIM card slot
3. USB Connector
4. Modem Cap
5. Front Cover

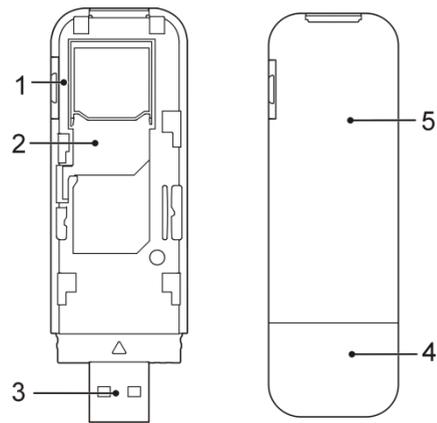


Installation Guide

Installing the SIM Card and microSD Card

1. Press and push the front cover down and remove it.

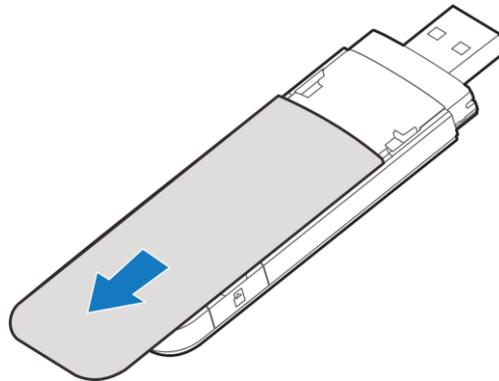


2. Insert the SIM card into the SIM card slot with the gold contacts facing down and align the cut corner on the SIM card as shown below:

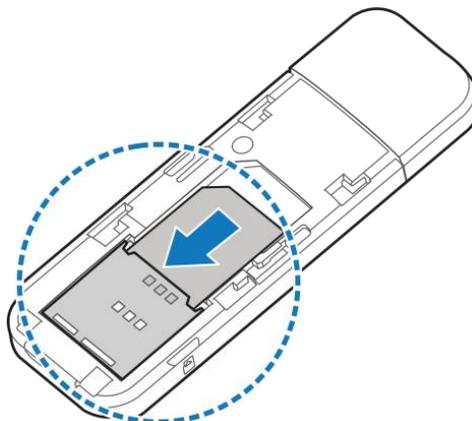


IMPORTANT: Your device supports a Standard (2FF) SIM card only. Do not use a Micro SIM with an adaptor as this may damage your device.

3. A microSD memory card is an optional accessory so you can use the USB modem as a portable storage device. The microSD is not included in the box. Open the SD cover on the side panel and insert as shown below:

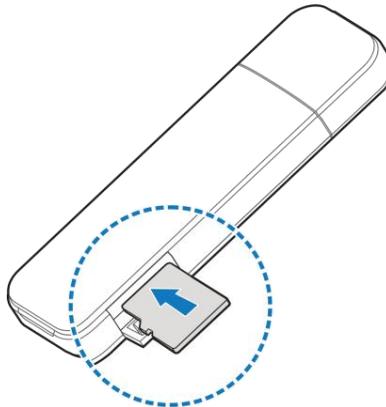


4. Slide the front cover gently back into place.

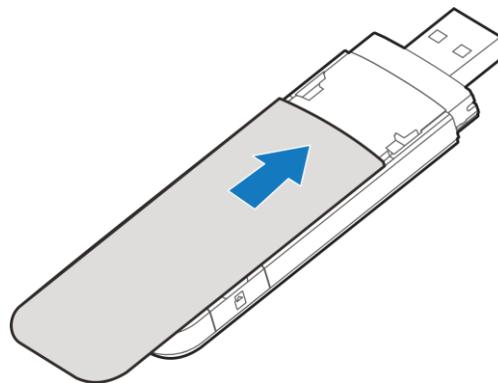

Connect the Modem to Your PC

1. Plug the USB connector into your computer's USB port and make sure that it is tightly inserted.

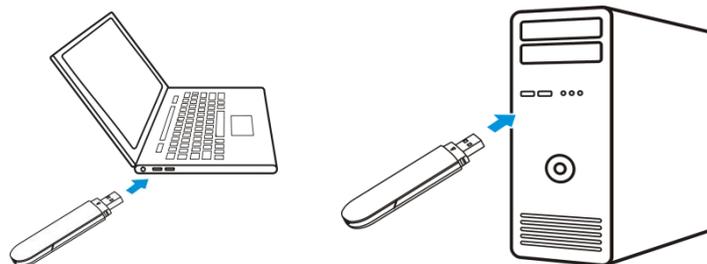

2. The OS automatically detects and recognises your modem and starts the installation wizard.

Installing Software

For Windows OS

Follow the system prompts to complete the software installation.

NOTE:


If the system does not launch the installation automatically, you can run the installation program from **My Computer > ZTEMODEM**.

For Mac OS

The system will automatically display a CD-ROM icon on the desktop when you connect the modem to your computer correctly. Double click the installation software package on this CD-ROM, and follow the system prompts to complete the software installation.

Modem Icons

Go to the web interface home page to check the device functions:

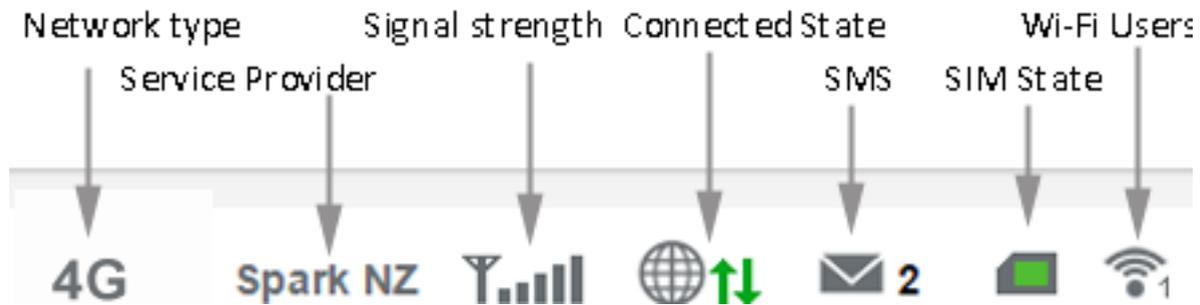

NOTES: A Red SIM card icon can mean any of the following states:

- SIM card is missing or incorrectly inserted. Remove the SIM card and re-inseert correctly.
- SIM card is PIN or PUK locked (Enter the PIN number, or contact your carrier for the PUK code)
- SIM card is faulty

Precautions and Safety Information

- Some electronic devices are susceptible to electromagnetic interference. The USB Modem is a transmitting device and may cause interference to sensitive electronic equipment such as audio systems, vehicle systems and medical equipment. Please consult the manufacturer of the other device before using the modem in close proximity to such systems.
 - Operating of laptop or desktop PCs with the device may interfere with medical devices like hearing aids and pacemakers. Please keep the device more than 20 centimetres away from such medical devices. Turn the device off if necessary. Consult a physician or the manufacturer of the medical device before using near such devices.
 - Be aware of regulations when using the device at places such as oil refineries or chemical factories, where there are explosive gases or explosive products being processed. Turn off your device as instructed.
 - Don't touch the antenna area unnecessarily whilst connected. This can affect your device performance and reduce the signal quality.
 - Store the device out of the reach of children. The device may cause injury or get damaged.
 - The device contains sensitive electronic circuitry. Do not expose the device to any liquids, high temperatures or shock.
 - Only use original accessories or accessories that are authorised by the manufacturer. Using unauthorised accessories may affect your device's performance or damage your device.
 - Avoid using the device in areas that emit electromagnetic waves or in enclosed metallic structures eg lifts.
 - The device is not waterproof. Please keep it dry and store it in a cool, dry place.
 - Don't use the device immediately after a sudden temperature change eg from an air conditioned environment to high temperature and humidity outside. In such cases there could be condensing moisture inside the device which can cause internal damage. Unplug the device and leave it for 30 minutes before use.
 - Always handle the device with care. Be careful not to drop or bend the device.
 - There are no user serviceable parts inside the device. Unauthorised dismantling or repair will void the warranty.
-

RF SAFETY INFORMATION

- The wireless device has an internal antenna. For optimum performance with minimum power consumption do not shield the device or cover with any object.
- Covering the antenna affects signal quality and may cause the device to operate at a higher power level than needed.

RADIO FREQUENCY ENERGY

- The wireless device is a low-power radio transmitter and receiver. When switched on it intermittently transmits radio frequency (RF) energy (radio waves).
- The transmit power level is optimized for best performance and automatically reduces when there is good quality reception.
- Maximum power is only used at the edge of network coverage so under most circumstances the power output is very low.
- Under poor network conditions the device transmits at a higher power level and may get hot.

SPECIFIC ABSORPTION RATE (SAR)

- The wireless device is designed to be used in close proximity to the body. We declare that the product detailed in this manual, and in combination with our accessories, conforms with the essential requirements of the New Zealand Standard (NZS2772) when used at a distance of not less than 10mm from the body.
- The worst case SAR result is published on <http://zte.co.nz>

Z1196
