

**Spark Pocket  
Mobile Phone  
User Guide**

## **LEGAL INFORMATION**

**Copyright © 2016 ZTE CORPORATION.**

 
**All rights reserved.**

No part of this publication may be excerpted, reproduced, translated or utilised in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

**Version NZ1.0 January 2017**



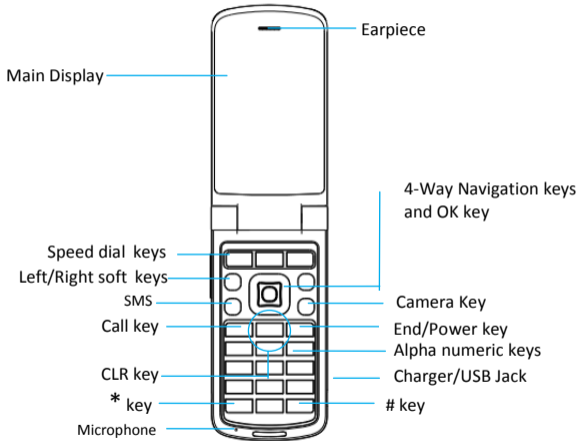








- Handset Overview



Function	Description
<b>Speed Dial Keys 1,2,3</b>	Key 1 is Voicemail, Key 2 and 3 are user customisable.
<b>Left soft key</b>	Performs the function indicated at the bottom left of the screen.
<b>Right soft key</b>	Performs the function indicated at the bottom right of the screen.
<b>OK key</b>	Press to confirm actions and make selections.
<b>4-Way Navigation keys</b>	Up        Shortcuts Right    Multimedia Down     Alarm Left      Browser You can change these options via Settings, Phone Settings.
<b>Call key</b>	Press to dial a phone number or answer a call. From the home screen press to view the call history.
<b>End/Power key</b>	Press to end a call or exit to the home screen. Hold to switch the phone on and off.
<b>Alpha numeric keys</b>	Press to enter numbers 0-9 and letters a-z.

**Note:** Press a key means to press the key briefly then release it.  
Hold a key means to press for two seconds and then release it.

## Status Bar Icons

 
	Signal strength		New SMS
	Missed Call		Battery status
	Keypad locked		Alarm is set
	Meeting mode		Silent
	Outdoor mode		New MMS
	Bluetooth is On		

# Battery


The battery can be used immediately. You will need to charge the battery within a few hours of first use.

## **Installing and removing the battery**


1. Open the battery cover using the thumb notch on the back cover, top left hand side.
2. Insert the battery by aligning the metal contacts with the contacts in the battery slot.
3. Push the battery down until it clicks into place.  
To remove the battery, pull it up using the thumb notch at the bottom and remove it from the mobile phone.
4. Replace the battery cover and press firmly down so it clicks back into place.
5. Charge the battery frequently to maximise battery life and do not leave the battery in a fully discharged state.

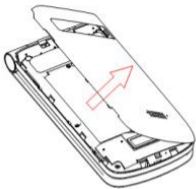

Open the battery cover

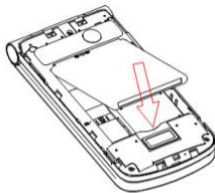 

Insert the battery

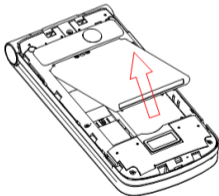 

Remove the battery




Replace the battery cover

# Insert the SIM card

 This handset uses a micro SIM or 3FF format.


1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover and battery (see page 7).
3. Place your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downwards.

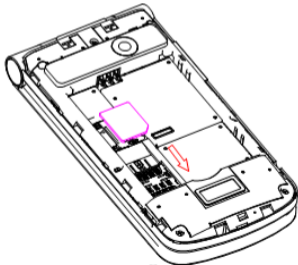



## Insert the memory card (optional extra)

 1. Turn the phone over and remove the battery cover and battery (see page 7).
2. Locate the memory card holder in the top left of the battery compartment.
3. Slide the metal bar to the left then lift it up to open the card slot.
4. Insert the memory card with the metal contacts facing down.
5. Close the metal bar and slide to the right to lock it in place.

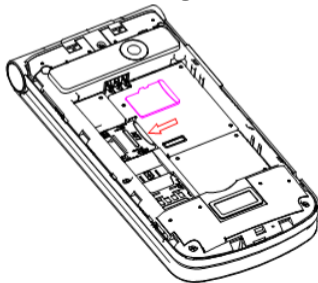

## Power your phone on and off

Make sure that your SIM card is in your mobile phone and that the battery is charged.

Hold the **End/Power** key to power the phone On or Off.

## Phone calls

Enter the number directly on the keypad and press the **Call key**. You can also make a call from the Phonebook list:

Press OK key to enter Menu > **Phonebook** >OK. Use the Up/Down keys to find the name of the person you want to call. You can also type in the first letter of the name of the person and press the **Call key**.

- To receive a call, press the **Call key**.
- To end a call, press the **End/Power key**.
- To reject a call, press the **End/Power key**. The caller will go to voicemail.

Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

## SMS (Short Messaging Service)

### Send an SMS

1. Press OK / Shortcut key to enter **SMS** Menu > **Write message** >OK.
2. Write your message. For more information on text input see 'Writing Text' below. When you write an SMS press Options > Send to, and edit the recipient.
3. When you write an MMS, you can edit the Subject and add content. Select Options and then choose add picture, sound, video, attachment etc.
4. When you finish writing an SMS/MMS, select Options to send or save the message.

## Receive an SMS

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt or a new message icon.

1. Press View to enter the Inbox directly and then press the OK key to open the message.
2. Use the Up/Down keys to view the message.
3. While the message is open, use **Options** to reply, call back the sender, forward or delete the message. You can enter the **Advanced** option to manage the contact details of the sender. Finally **Edit** options will allow you to Mark or Copy the message.

## Writing text

You may change the input modes by pressing the **# key** while in Write Message screen.:

Input Letters: press the corresponding letter keys to enter desired

characters. Note this does not work in numeric (123) mode.

**Input Digits:** In numeric (123) mode, press the keys to enter numbers.

**Input a Space:** Press the **0 key** to input a space character. This will not work in numeric (123) mode.

**Delete:** Press the CLR (back arrow) key to clear a character. Hold the CLR key to delete all characters and clear the display.

**Move Cursor to Left or Right:** Press the Left/Right navigation keys to move the cursor left or right within the text.

## Phonebook

To add frequently called numbers to your Phonebook;

1. Press OK to enter Menu > **Phonebook** > Add new contact
  2. Edit the information and save it.
- You can also save a number right after you've made or received a phone

call or a text message. You can manage most actions for contact details through your Phonebook list. First select the name, then select **Options** > choose whichever action you wish to take and press OK.

## Phone Settings

You can adjust various settings of your phone. Press OK to enter Menu > **Settings**.

- Phone settings: Set Time and Date, Schedule power on/off, Language, Text Input Method and personalize your phones style within this menu option.
- Network settings: Set to automatically or manually select network, the service type and view the network information.
- Security settings: Set security features to protect you from unauthorised use of your phone and SIM card.

- Connectivity: use this option to manage how you connect to other devices and the use of data.
- Restore factory settings: Enter the phone password to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.


**Note:** You may be required to input the phone password in some of the security settings interfaces. The default phone password is 0000. You also can change the password in **Settings**.

## Bluetooth

The first time you connect to a Bluetooth device you need to pair the devices by sharing a PIN between each device. Follow the steps below to pair devices:

1. Press OK to enter Menu > **Settings** > OK

Connectivity > Bluetooth to turn Bluetooth on or off.

2. When Bluetooth is on, the  icon will appear in the status bar.
3. Go to My device > Search new device: to search for Bluetooth-enabled devices in close proximity.
4. Select the desired device in the list and press Pair.
5. Enter the PIN and press OK. When the opposite party enters the same PIN the connection will be established. Default PIN's are typically 0000 or 1234 but this can vary between devices so consult your other device user guide to find the right PIN.

**Note:** Under Bluetooth> Visibility: When your phone is set to visible with Bluetooth on, all other Bluetooth-enabled devices within range can detect your phone.

6. Go to Search Audio device: Search new audio device to search for Bluetooth-enabled devices in close proximity.
7. My name: the model of your device.
8. Advanced: Manage Audio, Storage, Sharing permission and the address of your device from this option.



## Camcorder (Camera)

Press the dedicated short cut key for the Camera or Press OK to enter Menu > **Multimedia** > **Camcorder**.

1. Aim the camera at the subject then press the OK key to take the shot.
2. Press the Down navigation key to switch between Camera and Video mode.
3. Press the Left and Right navigation keys to control the zoom.
4. Press the Left soft key for camera settings. Scroll left and right using the navigation keys to choose options. To save to memory card, choose Adv. Settings>Memory card before taking the photo.
5. Configure camera: press the **Left soft key** to configure your camera to your desired Exposure Value.

Go to Menu > Multimedia > Image viewer to review your pictures and videos.

# Organizer

Press OK to Menu>**Organizer**

- Calendar: The calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.
- Tasks: You can use your phone to remind of the details of important tasks and set an alarm for when they are due.
- Alarm: You can view, and edit the alarm clocks settings. You can also enable or disable the alarms, or set the corresponding features of the alarm according to instructions.

# Extra

Press OK to enter Menu > **Extra**

- Calculator: Perform simple calculations. You can add, subtract,

multiply or divide, and select M+, M-, MR, and MC to perform relevant operations.

***Note:** This calculator has limited accuracy and rounding errors may occur especially in long division. Also use this option for unit and currency conversion and also a stopwatch.*

## File manager

Press OK to enter Menu>**File manager**. You can check all the folders in the memory card, create new ones or rename, delete the folders, etc.

***Note:** When you select **Format**, the data will be lost, so please be careful with this function.*

## Fun & Games

Press OK to enter Menu> **Fun & Games**>**Games**

Your mobile phone has classic games. Select a game and start it, you can view **help** to see the rules of the game.

## Multimedia

Press OK to enter Menu> **Multimedia**

Use this menu to manage and edit images and audio. You may wish to store this on the memory card.

**Note:** *You will need to ensure that the memory card is inserted prior to saving and that you have chosen to store to memory card as per the Adv. settings.*

# Browser

Browser allows you to view internet content. You can also use the STK SIM card Toolkit (STK) please see below for details.

Press OK to enter Menu > **Browser**

- Internet service

You can perform the following operations:

- Homepage: Go to your homepage interface.
- Bookmarks: Access your phone's preset websites. Select a bookmark to load the website.
- Search or input URL: Input a URL to visit the site.
- Settings: You can set Homepage, Data account, Browser options and Preferences.
- STK

*SIM card Toolkit (STK) services are value-added services provided by your network provider.*

*Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.*

## User Profiles

Use this option to personalize your phone ring tones for different situations, eg. Outdoor mode.

## Shortcuts

Use this option to set your shortcuts available through your 4 way navigation key.

Press OK to go to Menu> **Shortcuts**. Click on options to make changes to the Shortcuts menu, including the order in which they show.

# Call Centre

Press OK to enter Menu>**Call centre**

- Call History will allow you to view a detailed history of outgoing and incoming calls and text messages.
- Call settings will help you to manage if and when you answer calls, set number barring and how you respond to missed calls via the Advanced settings.

## Technical Specifications

---

Network	UMTS 850, 2100 MHz , GSM 900, 1800 MHz
---------	--

---

SIM Card	Micro SIM, 3FF
----------	----------------

---

Dimensions	105 x 54.6 x 17.8 mm
------------	----------------------

---

Display	2.8" QVGA Main screen with 1.77" QQVGA front
---------	--

---

Data Rates	HSDA Mode up to 7Mb/s Download
------------	--------------------------------

---

Battery	1200mAh Li-ion
---------	----------------

---

Camera	2.0MP Fixed Focus
--------	-------------------

---

CPU	MTK MT6276A 611MHz processor
-----	------------------------------

---

Memory	64MB RAM, expandable to 32GB microSD
--------	--------------------------------------

---

Operating Temperature	-5°C to +45°C
-----------------------	---------------

---



## RF SAFETY INFORMATION

The wireless device has an internal antenna. For optimum performance with minimum power consumption do not shield the device or cover with any object.

Covering the antenna affects signal quality and may cause the device to operate at a higher power level than needed.

## RADIO FREQUENCY ENERGY

The wireless device is a low-power radio transmitter and receiver. When switched on it intermittently transmits radio frequency (RF) energy (radio waves).

The transmit power level is optimized for best performance and automatically reduces when there is good quality reception.

Maximum power is only used at the edge of network coverage so under most circumstances the power output is very low.

Under poor network conditions the device transmits at a higher power level and may get hot.

## SPECIFIC ABSORPTION RATE (SAR)

The wireless device is designed to be used in close proximity to the body. We declare that the product detailed in this manual, and in combination with our accessories, conforms with the essential requirements of The Radiofrequency Fields – Maximum Exposure Levels Standard when used at a distance of not less than 5mm from the body. The worst case SAR result is published on <http://www.zte.co.nz>