



# Spark R84 Overview



# LED Status & Homescreen icons

Red  Less than 15% charge

Orange  Between 15 – 90%

Green  More than 90% charge

LED Flashing Unread Message, Missed Call or Notification



Phone Calls



Phonebook for all your Contacts



Open the Apps menu






Messages app, for SMS and MMS



Chrome browser

## Key Functions

Keys	Function
Power Key	Hold down to power on your phone. Press to wake up or activate sleep mode. Hold down for Restart, Power off, Flight mode, Silent, or Vibrate options.
Back 	Press to go to the previous screen. Press to exit applications.
Home 	Press to return to the Home Screen from any screen. Hold down to access Google Search or Google Now.
Options 	Press to get the options on the current screen. Hold down to see the recently used applications.
Volume Keys	Use to control the volume Up and Down
Torch Key	Long press to activate the Torch

## Insert the SIM Card and microSD Card\*

1. Locate and open the SIM port on the right hand side of the phone. The cover opens up from the bottom.
2. Hold the SIM card with the gold contacts facing up and the cut corner facing the top of the phone as shown and slide it into the card holder. Press it home so it clicks into place.
3. If you wish to increase the memory capacity insert a microSD card (\*optional) up to 32GB with the metal contacts facing up as shown above. Push it fully home until it clicks into place. The microSD card is not included in the box.
4. Remember to always close the port covers after use to maintain the ingress protection (IP67) rating.

microSD card is an optional accessory to expand your device memory.



Only use micro SIM (3FF) format SIM cards. Do not use an adaptor which may damage your device.



## Charging the Battery

The back cover is sealed and the battery is not removable.  
Do not attempt to open the cover which will void your warranty.

### To charge the battery:

Insert the charger lead carefully. Ensure that the plug is inserted with the correct orientation.

Do not force the connector into the charger jack.


Connect the charger to a standard AC wall outlet.

 
Disconnect the charger when the battery is fully charged.

If liquid gets into the charging port, please blow it out and leave the handset to dry before charging.

### How much charge have you got?

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the lock screen will tell you the battery level each time you wake up your phone.

If the phone is on, you'll see the charging icon  on the status bar.

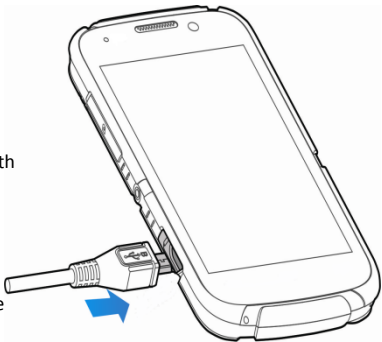

## Powering On/Off

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.








 








**TIP** If you see FTM during power up this indicates Factory Test Mode and is initiated by holding the Volume Down key during power on. Press the Power key for 3 seconds to exit FTM mode.

## Setting Up for the First Time





















When you first power on your phone or after a factory reset you need to enter some settings before use.

1. The default language is English (New Zealand) touch to change if required or touch **Start**.
2. Select **Yes** if you have a Google account or **No** to skip.
3. Configure the Google location options and touch **Next**.
4. You will be prompted to accept the terms of Google service. Touch **Next** to continue.
5. Set your Location preferences
6. Enter a preferred user name if required
7. Touch **Finish** to complete the setup.
8. Further assistance is given in the form of pop ups describing how to use various features.

## Phone Status Icons

G	GPRS network		No Network signal
E	EDGE network		Signal strength (no data)
3G	3G network		Mobile data in use
4G	4G LTE network		Wi-Fi on but not connected
H	HSDPA network		Wi-Fi connected, no data
	Flight mode		Wi-Fi data in use
	Battery flat		Ringer off
	Battery partially drained		Muted (microphone off)
	Battery full		Vibrate mode
	Battery charging		Speaker on
	Wired headset connected		

## Notification Icons

	New SMS		microSD card not mounted
	New MMS		Upcoming event
	New Email		Call on hold
	New Gmail message		New Wi-Fi network detected
	Problem with SMS/MMS delivery		Downloading data
	Missed call		Sending data
	Call in progress		USB tethering is on
	USB connected		Portable Wi-Fi hotspot or Wi-Fi direct is on
	Song is playing		Updates available
	GPS is on		Bluetooth on

Access the full user guide on your device at **Apps > User Manual**.

Search 'ZTE Australia' to keep in touch:

